

GPS & Location

Global settings

Run at startup
Sets the way GPS turns on at Locus Map startup:

- Always - GPS turns on always when Locus Map is started
- Previous state - GPS turns on or stays off according to last Locus Map session
- Never - GPS never turns on at Locus Map start

Altitude manager
Sets options to improve altitude measurement. More about it here » ☐ altitude manager

Notification settings

Position acquired
Notifies user of the GPS acquiring location of the device.

Position lost
Notifies user of the GPS having lost location of the device.

Disable/enable GPS

Disable when hidden
Disables GPS when the screen is turned off or the app is minimized and GPS is not required by any other function

Track recording
Keeps GPS on during the track recording even if the app is minimized, screen is off and the recording paused.

Guiding
Keeps GPS on during guiding even if the app is minimized and screen is off.

Bluetooth GPS

Bluetooth GPS
Launches the [Bluetooth manager](#) to enable GPS from a bluetooth device instead of the internal GPS. The advantage is better GPS accuracy and lower phone battery consumption.

From:
<http://docs.locusmap.eu/> - Locus Map Classic - knowledge base

Permanent link:
http://docs.locusmap.eu/doku.php?id=manual:user_guide:settings:gps&rev=1423673293

Last update: **2015/02/11 16:48**

