



# Track recording panel and widget




Track recording in Locus Map can be controlled by two kinds of Locus screen panel and a widget (available only in Locus Map Pro). The type of the track recording panel that can be selected in [track recording settings](#) - **sliding side panel**, which is set as default, and **compact bottom panel**.

## Sliding side panel

It slides from the left side of the screen and can be slid back by a finger. In case track recording is launched from a dedicated button in the [function panel](#) it can be slid by the “back” HW button. Its content is different in two phases of its use:

### Tracks recording start

Here you can select your recording profile, pre-set training scheme or external sensors.  **starts track recording.**

[obrazek\\_track\\_recording\\_start\\_panelu](#)

### Track recording control&monitoring

Major part of the panel is covered by the track parameters that are actively monitored and displayed during the recording.

[obrazek\\_track\\_recording\\_ctrl\\_panelu](#)

You can set which values you want to monitor:

- 1. go to settings > track recording > number of track monitoring items. Number of track monitoring items on the panel can be set from 4 to 12.
- 2. go back to the recording panel and long-tap the field you want to change


- 3. select from a vast range of available parameters  
[obrazek\\_vyberu\\_sledovanych\\_fci](#)
- it is possible to define also two charts  
[obrazek\\_vyberu\\_grafu](#)

During the recording the elevation gain value can look confusing as it displays quite large numbers - however, the value is true and displays total of elevation gain measured by your device. As the GPS-measured altitude values are quite fuzzy, the result has to be optimized. The optimization is calculated later after saving the track so as not to waste battery life of your device.

- *distance downhill*
- *distance uphill*
- *pace* - activity time for a kilometer
- *trackpoint counter*
- *current time*
- *battery level*



Number of track monitoring items on the panel can be set from 4 to 12. Long-tap on any item opens menu of available features to be monitored.

 
-  **Start button** - starts track recording. If the GPS is not running, you will be prompted to switch it on.

The track recording can be started with countdown that can be defined in track [recording settings](#)



## Options

- **more about track** - switches to the track detail screen
- **save actual part** - saves already recorded part of track individually without stopping recording  
- enter name, select folder, describe the track if you like
- **settings** - switches to the [track recording settings](#)
- **bluetooth manager** - switches to the bluetooth sensor management
- **ANT+ manager** - switches to the ANT+ sensor management
- **User guide** - offers help in User guide

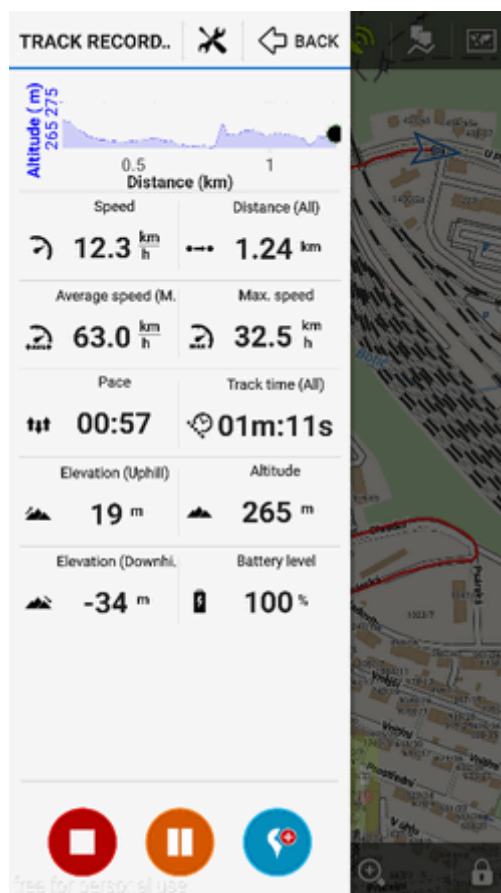


## Compact bottom panel

An additional compact bottom panel is another option of displaying track recording. It can be set in track [recording settings](#).





 
# Track Recording Widget

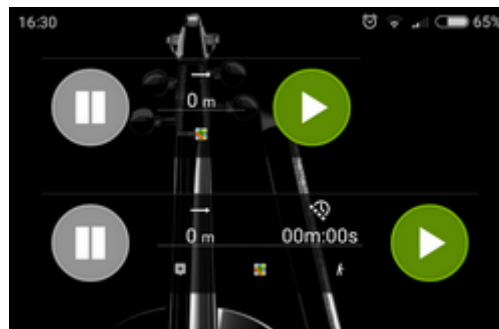
Widget is available only in Locus Map Pro



Track recording in Locus Map can be comfortably started from a widget. There are two sizes available:

## Small widget

 - track recording start button 
- track recording pause button  and stop button  - visible when the recording is on
- recorded track distance indicator
- Locus Map app launch button

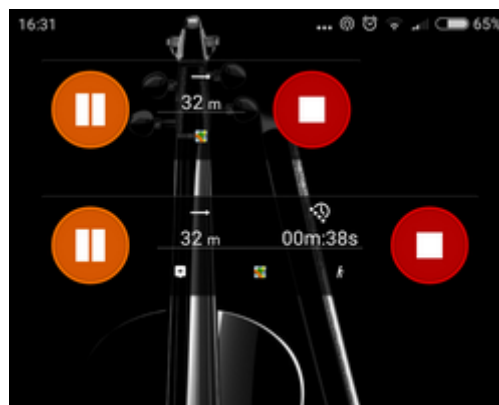

## Large widget

Contains all controls of the small widget plus:

- recorded track time indicator
- [insert point](#) button 
-  [track recording settings](#) button

From:

<http://docs.locusmap.eu/> - Locus Map Classic - knowledge base

Permanent link:

[http://docs.locusmap.eu/doku.php?id=manual:user\\_guide:tracks:recording:panel&rev=1478793756](http://docs.locusmap.eu/doku.php?id=manual:user_guide:tracks:recording:panel&rev=1478793756)

Last update: **2016/11/10 16:02**

