



 


Track Recording Settings

- [Menu > Settings > Track recording](#)

Recording profiles

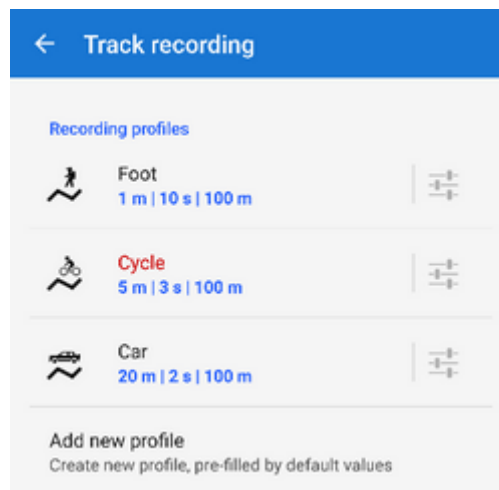



- **Foot** - pre-defined profile. Frequency of trackpoints: 1m and 10sec. GPS accuracy: 100m. Tap  to [edit the profile](#).
- **Cycle** - pre-defined profile. Frequency of trackpoints: 10m or 5sec. GPS accuracy: 100m. Tap  to [edit the profile](#).
- **Add new profile** - [available only for Locus Map Pro users](#). Allows to [define a completely new profile](#) based on default values.



[More about creating and editing recording profiles here >>](#)


Global

- **Personal information** - [available only for Locus Map Pro users](#) - settings necessary for calculation of your **energy consumption** during activities - sex, age, height and weight
- **Style of track recording panel** - selection between full-featured, dashboard-like sliding side panel or simple compact bottom panel

- **Automatic start** - available only for Locus Map Pro users - starts track recording automatically after each Locus Map startup. Useful for thorough mapping of your training but demanding a lot of data space.
- **Training manager** - limited for Locus Map Free users - turns Locus Map into a full-scale sporttracker. Opens a dialog setting voice notifications accompanying your workouts:
 -  **topbar menu** - Text-to-speech settings - sets TTS service and language
 -  **adds a new training** notification scheme. Sets its icon and name
 - **list of notification schemes** - tapping a particular scheme opens the scheme setting dialog with distance or time trigger interval and a list of notification variables - distance, average speed etc.

How to set up a new training:



- Training manager >  Add new training > set icon&name > **Add**
- select a recording profile, e.g. "Bike" > **Recording profile settings** > scroll down and select **Training auto-start** > select one of the pre-defined training schemes > the scheme is associated with the recording profile and starts automatically with the track recording

Side panel

- **Auto-hide side panel** - hides side sliding panel automatically after start/stop of recording to free screen space for map
- **Number of track monitoring items** - defines number of visible track monitoring items in a grid on the panel
- **Start with countdown** - starts track recording with a pre-defined countdown from 5 to 30 seconds

From:
<http://docs.locusmap.eu/> - Locus Map Classic - knowledge base

Permanent link:
http://docs.locusmap.eu/doku.php?id=manual:user_guide:tracks:recording:settings&rev=1473429282

Last update: 2016/09/09 15:54

