

Steuerung


Übersetzung in Arbeit

Anzeige

Werbung


Dieser Menüpunkt ist nur Locus Free zu sehen

Wenn Sie dieses Häkchen abwählen erscheint ein Hinweis zum **Kauf** der werbefreien **Locus Map Pro** Version:

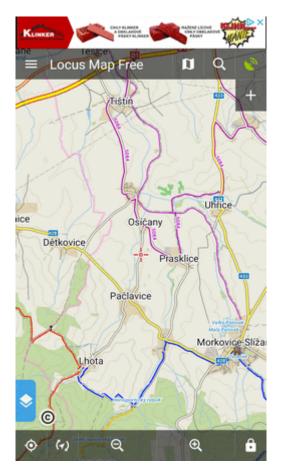

Vollbild

Blendet die Infoleiste am oberen (oder unteren) Bildschirmrand aus und die Karttenanzeige von Locus nimmt den ganzen Bildschirm ein:

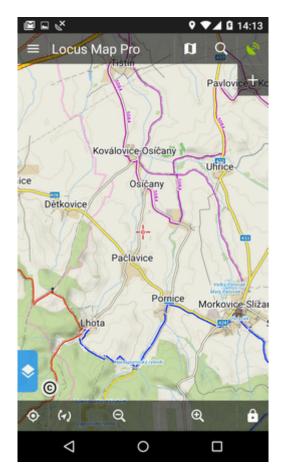

Orientation Lock

Eliminates rotating of the display depending on the phone position.

Settings

- System settings follows the Android system settings of screen orientation
- All screens orientation locked in all screens
- Map screen orientation locked in map screen only

Orientation

It selects which display position will be locked:

- portrait mode
- landscape mode
- reverse portrait mode

• reverse landscape mode

Screen On/Off Control

This option overrides system screen on/off settings. It is available in **Locus Map Pro** only.

Defines situations when the screen is turned on/off by gestures or the app itself.

Gestures

- Disabled screen on/off by gesture is disabled
- Wave once wave once in front of the device proximity sensor to turn the Locus Map screen on
- Wave twice wave twice in front of the device proximity sensor to turn the Locus Map screen on

<html><iframe width="560" height="315" src="https://www.youtube.com/embed/w25-HNIUG-s" frameborder="0" allow="autoplay; encrypted-media" allowfullscreen></iframe></html>

Guidance/Navigation

- **Turn on when notified of a point** Locus Map screen turns on when it notifies user of a point coming closer (notifications must be on, see Guidance to a Point >>)
- **Turn on when notified on a track** Locus Map screen turns on when it notifies user of either next direction change or leaving the route he is being guided along.
- Turn on when notified during navigation Locus Map screen turns on before each voice command during voice navigation

Auto screen turn-off

- setting of the interval before turning the screen off again
- is set in 5 second steps from 0 to 120 seconds. 0 = screen turning off is disabled (until the system turns the screen off)



Android 7+ "Nougat" users: this feature does not work in Locus Map installed in your external SD memory - your OS does not assign proper permission to it. Move your Locus Map to your internal shared storage:

- open up Apps in your device Settings and navigate to Locus Map
- click on Storage and select Change
- select Internal Shared Storage and then confirm by pressing Move

Always screen on

The option overrides system screen on/off setting but does not influence the settings made by the *Screen on/off control* feature. It is available only in **Locus Map Pro**.

Locus Map prevents the phone screen from turning off:

- Always permanent screen on
- When GPS is on screen stays on when the GPS is on
- During guidance/navigation screen stays on when user is navigated or guided to a point or along a track typical usecase car navigation
- When charger is plugged in screen stays on only during charging the phone

Disable Screen Lock

This setting disables your device screen lock in case Locus is active. Other apps remain behind the screen lock. There are three levels of unlocking:

- **System settings** nothing is changed, it is necessary to unlock your screen before displaying Locus
- **Basic screen lock** only basic phone lock (slider) that just prevents user from accidentally turning the device on is deactivated. If you have your device secured by a password, finger print or a gesture, you have to unlock it in order to work with Locus.
- All screen locks password, finger print or gesture secured locks are also disabled for easy entering Locus. However, this setting may not work on some devices.

Map screen

Map control style

Select mode of basic map controlling:

- Locus Map mode double tap shows hidden menu
- **Google Maps** mode double tap = zoom in, two fingers tap = zoom out, three fingers tap = hidden menu

Use hardware buttons

Volume controlling hardware buttons can be used to zoom the map.

Phones with hardware or Bluetooth keyboard can be also controlled by letters **C** - map centering, **D** - display, **G** - GPS, **arrow buttons** - map shift, **+/-** - zooming.

Simple multi-touch

Check if you prefer to disable rotation and panning of the map when pinch-zooming.

Tap and hold to display address

If checked, long-tap any place on the map, Locus Map will try to provide postal or regional address of the place:

5/16



(provided by Google, GraphHopper, MapQuest or Bing - can be set in Miscellaneous.

Shift map cursor

It moves the map screen cursor down by 1/4 of the screen. Functional only with the map rotation on. Useful especially for guiding or navigation:



Hold map center

If you shift the map out of your current position when browsing it, this function centers it back on current GPS location after 5 secs of inactivity:



(the interval can be changed in Locus/Config.cfg file)

Two finger measuring

Enables measuring distance between two fingers touching the screen:



Map cursors

Here you can select set of location and tracking cursors, set their size or add your own.

Zoom according to speed

Sets association between speed and displayed map zooms. Bigger zooms for slow speeds and vice versa. Useful for navigation and guidance.


- select map zoom on the preview map
- define corresponding speed
- tap ADD

← Zoom according to speed			
	Enable		
	900 m	+ -	
ZOOMS			
0.0 km/h	600 m		
50.0 km/h	300 m		
100.0 km/h	1 km	I	
200 km/h	2 km	•	
		+	

Panels & buttons

Set Functions Panels


The functions panels in Locus Map enable quick launching of your favorite functions. They consist of the top and right panel containing functions switching buttons:

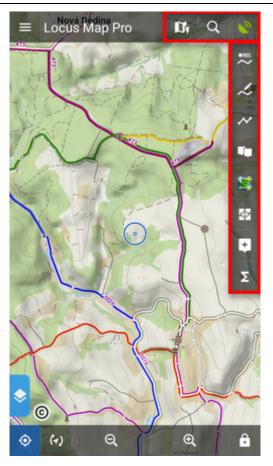


This setting item opens the functions panels editing screen:

List of selected buttons in top and right panels

Position of the buttons can be changed by **dragging their icons up or down across both panels**:

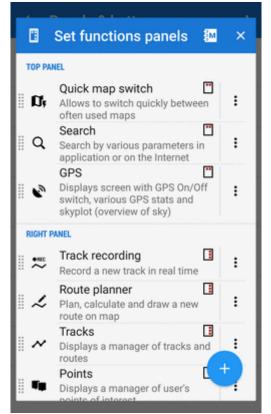


The sign in the upper right corner of all items indicates position in top or right panel. Action menuoffers to change button function or remove selected button:

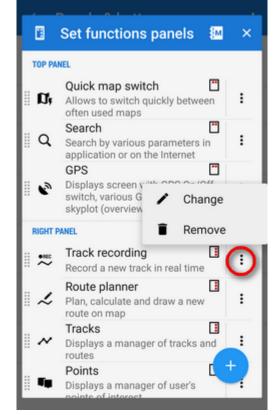

Add new item

• Add function to panel - adds a new button with selected function to the functions panels:

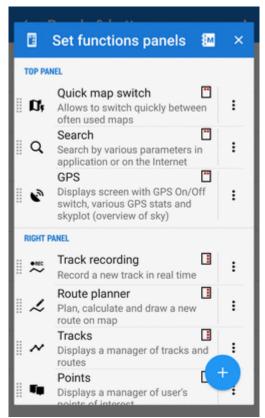

 Add link to app - adds a shortcut to any application installed on your device for quick launch (e.g. various cooperating apps):

	Set functions panels 🛛 🔅	×		
TOP PANEL				
i D;	Quick map switch II Allows to switch quickly between often used maps			
٩	Search Search by various parameters in application or on the Internet			
•	GPS Displays screen with GPS On/Off switch, various GPS stats and skyplot (overview of sky)			
RIGHT PANEL				
•===	Track recording Record a new track in real time			
	Route planner I Plan, calculate and draw a new route on map			
~	Tracks Displays a manager of tracks and routes			
	Points Displays a manager of user's			


Set content panel

Here you can set appearance and content of the left edge panel:




All its parts can be **slid out individually** or the whole panel can be **deactivated**:

• check all categories that you want to be switchable from the left side **individually**:

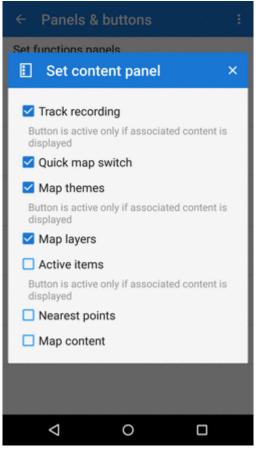


• check Map content (checked by default) - all categories slide out together on one panel:

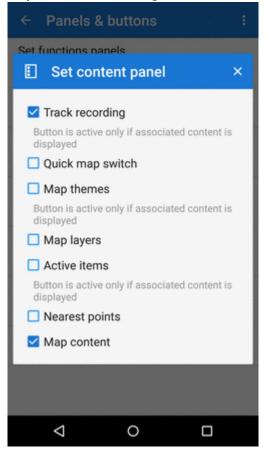

OR

• uncheck all items to **hide everything** from the left side of the map screen:

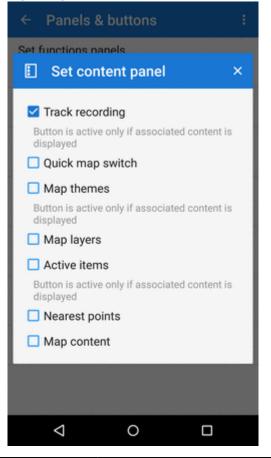

https://docs.locusmap.eu/



Some categories are visible only when the content they represent is **active**, e.g. Active items or Map themes.

Top Panel Hiding


Hides the top panel when inactive. Double tapping on the map displays it back provided the *Map control style* is set to *Locus Map* mode. Three-finger tap to display it if you use the *Google* mode.

Bottom Panel Hiding

Hides the bottom panel when inactive. Double tapping on the map displays it back provided the *Map control style* is set to *Locus Map* mode. Three-finger tap to display it if you use the *Google* mode.

Right panel hiding

Hides the right panel when inactive. Double tapping on the map displays it back provided the *Map control style* is set to *Locus Map* mode. Three-finger tap to display it if you use the *Google* mode.

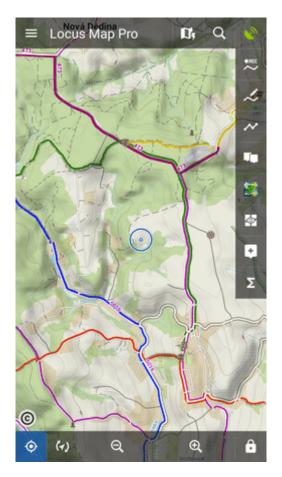

Panels vs Screen Orientation

If the hiding of panels is on, it sets their further behavior depending on the screen orientation:

- Both panels hide in both landscape and portrait modes
- Landscape mode panels hide in landscape mode only
- **Portrait mode** panels hide in portrait mode only

Panel Hiding Timeout

In case the panel hiding is on it sets the time interval before the panels slip in.

From: https://docs.locusmap.eu/ - Locus Map Classic - knowledge base Permanent link: https://docs.locusmap.eu/doku.php?id=manual:user_guide:settings:control&rev=1534496104



Last update: 2018/08/17 10:55