2025/10/19 03:04 1/1 Bluetooth Manager

Bluetooth Manager

About

Locus Map can communicate with various Bluetooth-connected external devices - external GPS units, heart rate monitors, bicycle speed&cadence sensors, Zephyr sensors, Polar sensors and NMEA readers. Bluetooth manager displays their switches and settings.

Instructions of Use

- **topbar** contains **menu of devices** that can be managed by Locus Map disconnected devices can be unchecked to save space
- list of devices displays all devices that are or can be connected and their switches
- status displays the device status and actual data if the device is connected

From:

https://docs.locusmap.eu/ - Locus Map Classic - knowledge base

Permanent link

 $https://docs.locusmap.eu/doku.php?id=manual:user_guide:tools:bluetooth\&rev=1427899670$

Last update: **2015/04/01 16:47**

