GPS/Compass
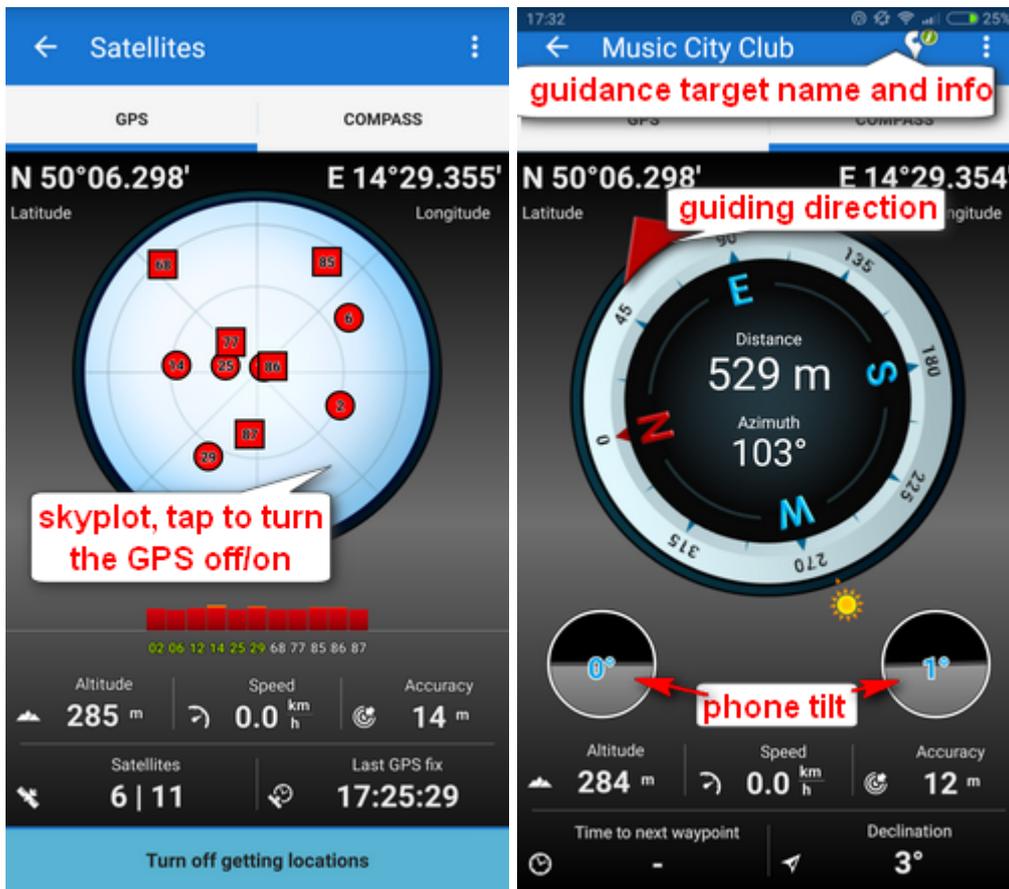

The **GPS/Compass button** switches on a two tabbed window displaying the **skyplot** - placement of monitored GPS satellites and more useful information like current *altitude*, *speed*, *GPS accuracy*, *current coordinates*.

Tapping the skyplot **switches on/off** the GPS as well as the button in the bottom. The other tab displays the **compass**, *azimuth, distance of your navigation target and tilt of the phone*.

Tapping the tilting indicators opens a menu offering sensor calibration.